


INTELLI VISION Intelligent Television

HAND-CONTROLLER SERVICE FLYER

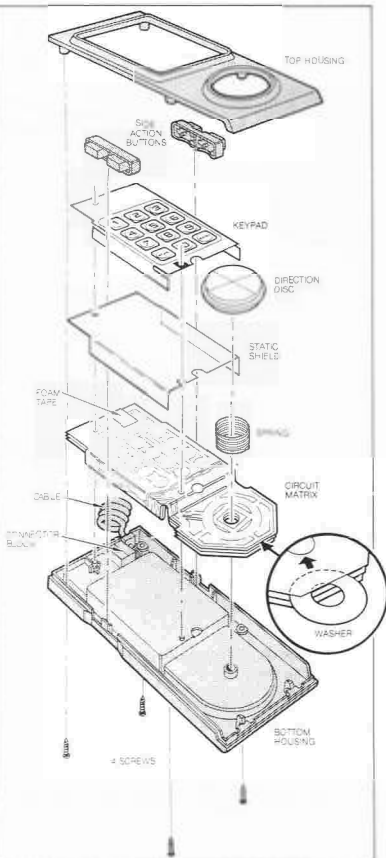

CIRCUIT MATRIX REPLACEMENT

Important: Make sure foreign material (i.e., dirt, dust, etc., does not come in contact with the plastic parts. Do one Hand Controller and check yourself before doing the other.

Unplug Master Component from power source. Disconnect switch box cable.

Enclosed are two Circuit Matrices, two Anti-Static Shields, and two Hand Controller Lower Housings. These are new parts you will need for Circuit Matrix Replacement.

